



## HAND-HELD LAUNCHER

QUICKSTART GUIDE

### Getting Started

Push the lift cup, edge upwards, to the bottom of the barrel. If loading confetti, cut off the short edge of the easy-load sleeve and pour the contents into the barrel. If loading streamers, cut off the short end of the easy-load sleeve and, without removing the plastic packaging, use the open end to push the lift cap to the bottom of the barrel; then, pull the plastic packaging out of the barrel. (Each launcher takes two ten-inch long sleeves of slow-fall confetti or one sleeve of streamers.)



### Setup

Place a compression cap over the open end of the barrel and, using masking tape, carefully tape its edge to the barrel. Make sure that the seal is tight though do not wrap the edge more than once. DO NOT tape across the top of the cap, or else you will not achieve the desired effect.



### Included In This Box



### Returning the Gear

**Please Save Original Packaging!**

**Please Return Gear To:**  
Confetti Unlimited  
Equipment Returns Department  
1111 Town & Country Road, Suite 38  
Orange, CA 92868-4667

### Customer Support

#### Online Video Demo

Go to [www.ConfettiUnlimited.com/hh](http://www.ConfettiUnlimited.com/hh)

#### Toll-Free Telephone

1 (888) OC-FETTI

#### 24-Hour Direct

1 (714) 824-9476



### Setup

Make sure that the trigger is in the up/closed position. Screw in a new CO2 cartridge; if you hear a hissing noise, keep tightening the cartridge. A cartridge that is not fully seated means the launcher will not function properly. The launcher is now armed.



### Reloading

After firing the launcher, the expired CO2 cartridge will be freezing cold, so wait a few seconds before unscrewing it. Make sure to remove the CO2 cartridge before resetting the trigger (putting it in the closed/up position); make sure to reset the trigger before loading a new CO2 cartridge

### Firing Cannons - Launching Confetti

Firmly holding the barrel with one hand just above the CO2 cartridge, point the launcher at a 45-degree angle (or higher) into the air. With the other hand sharply tug the trigger cord to



launch confetti or streamers 40-60 feet into the air.

### Connecting Multiple Units

#### SIMULTANEOUS FIRING

To fire launchers simultaneously, each launcher requires its own operator. Have one operator be the lead and all other operators start from the lead's cue.

#### Safety Warnings

- ✓ Read instructions prior to use.
- ✓ Intended for use by properly instructed adults only!
- ✓ Do not thread in Co2 until ready to fire.
- ✓ Never point cannons at anyone or anything.
- ✓ Special effects can be dangerous, use at your own risk!

